




Skidoo T Motion Lockout Kit

1. Raise rear of sled on a stand so track is just off floor or lay sled on its side. Either method will work.
2. Remove tension from rear coil springs. Removing the rear spring preload takes the pressure off the T motion pivot so the bolt can easily be removed and installed.
3. Remove the bolt through the rear scissor and Rear Torque Arm.
4. Install a T Motion lockout bushing on each side of the bearing.
5. Reinstall bolt and then and tension springs. Torque bolts factor specs.

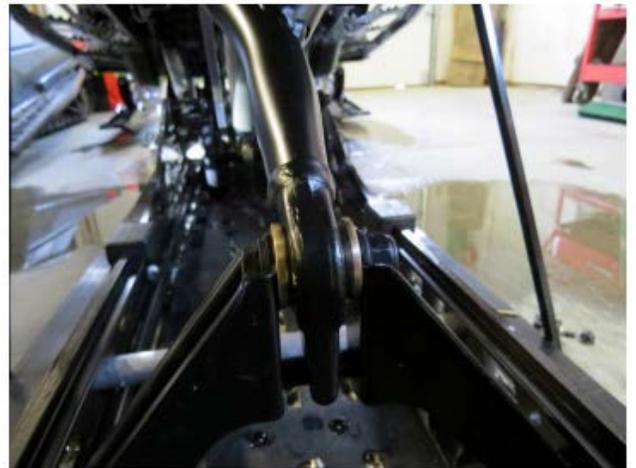

Please email zrp.engineering@gmail.com if there is any issue with your order. We will work tirelessly to make it right!

Like us on fb.me/ZollingerRacingProducts & Order at: ZOLLINGERRACINGPRODUCTS.COM

Remember: Performance Matters!